





Cliff Letterbox Installation

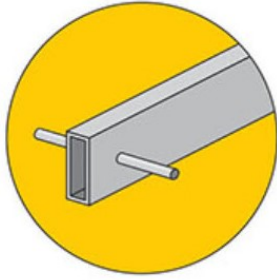


- 1 After unpacking, lay the letterbox gently on its side to avoid scratching it.
- 2 Untape the Aluminium tube from the leg and insert it into the hole in the bottom of the leg

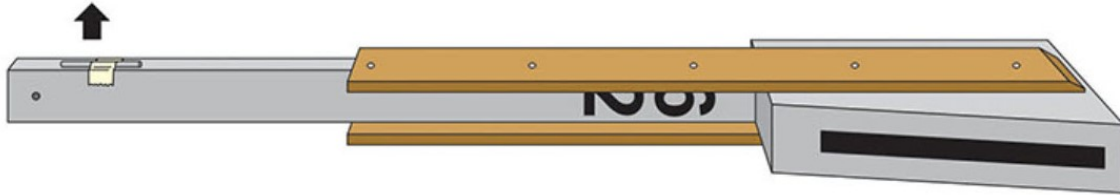

- 3 Dig a hole 20cm x 20cm & 40cm deep
- 4 Place a small amount of concrete or Postmix into the hole, then place the letterbox in the hole, making sure that the bottom of the Merbau timber sections will be slightly above the finished ground level.

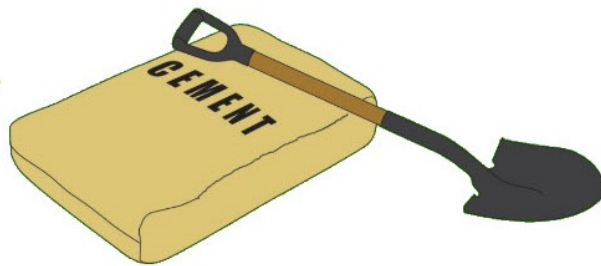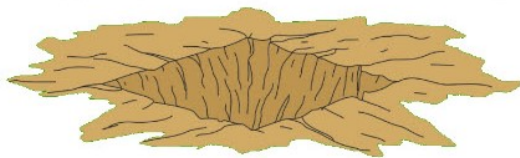

- 5 Have someone hold the letterbox upright and orientated in the direction you want, then fill the remainder of the hole with concrete

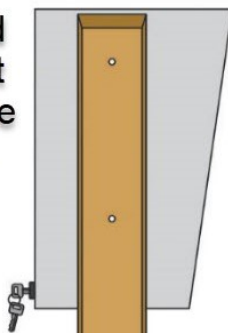

- 6 Finally check with a spirit level to ensure it is not leaning one way or another

Make sure that the timber does not touch the ground

